



TREE CHECK

SONIC WAVE TREE DECAY DETECTOR

USER MANUAL

©Allison Tree, LLC
1830 Sugar River Road
Verona, WI 53593
allisontree.com

Items included in the Tree Check case:

1. Control Box with screen
2. Two Sensors with two set screws each
3. Two telephone-type cables
4. Two 20D 4" bright common nails, two 6" wood screws, and two awls
5. One hammer
6. Four AA batteries
7. User Manual

TABLE OF CONTENTS

Overview
Interpreting the Results
Testing Procedure
Trouble Shooting



OVERVIEW

Tree Check is designed for professional use by researchers, arborists and urban foresters as a low cost, simple to use, reliable field tool to detect the likely presence of significant decay, cavity or cracks in standing trees. Used properly it can “see inside the tree” revealing areas of concealed severe deterioration that undiscovered could result in tree structural failure and resultant property damage or personal injury. Tree Check is a carefully designed stress wave timer. The tool consists of two sensors (**with a clear conformal coating for protection**) that are connected to an electronic circuit board box by simple telephone cables. The sensors are secured with setscrews on a pair of nails, wood screws or carpenter’s awls that penetrate through the bark and slightly into the tree wood on opposite sides of the trunk. The white arrows on the sensors must always point inward toward the trunk. After turning on the device, the user lightly hammer taps the start sensor nail, screw or awl creating a sonic or stress wave traveling through the trunk and at the same time creating an electronic signal to the circuit board box starting the “stop watch” timer. When the leading edge of the sonic wave arrives at the opposite sensor, it creates an electronic signal to stop the timer. The circuit board box displays both the wave transit time in microseconds and a graphic representation of the waveform itself. The user measures the distance between the sensors, calculates the transit time per inch or centimeter comparing it to an expected transit time for defect-free wood of that species. Longer than expected transit times can be an indication that the sound wave movement was obstructed by internal decay, cavity or cracks.



INTERPRETING THE RESULTS

TRANSIT TIME

In interpreting transit time do not anticipate there should be a single absolute transit time per unit measured for defect free wood but rather assume instead that there is an anticipated normal range for the movement of the wave through defect free wood. Average measured transit times across defect-free wood vary by tree species, growing conditions and manufacturer of the stress wave timer. **It is always preferable to find a part of the subject tree that is known to be defect-free and make a reference check for anticipated transit time per unit measured there.** When using the Tree Check instrument as a preliminary inspection for concealed severe deterioration during a pre-climb safety check, tree risk assessment or urban forest inventory one can use the following guidelines:

Tree Check reference stress wave transit times per unit length by species density on healthy trees

Material	microseconds/inch	microseconds/cm	Example
Hardwood	18-22	7-9	oak, hickory, walnut, beech, ash, locust, sugar maple,
Softwood	25-30	10-12	pine, fir, spruce, boxelder, silver maple, poplar

Numbers greater than 30% above an anticipated range could suggest internal obstructions to the wave movement across the trunk diameter. The higher the transit time per unit measured above the reference time the more likely there is a major obstruction or wood deterioration requiring caution and further investigation. Always use your own professional judgment, consideration of the individual circumstances and experience with the tool to set a reasonable acceptable threshold.



WAVEFORM

By displaying the waveform graph, Tree Check offers the user additional information regarding the sonic wave and its relationship to the wood properties of the subject tree. There is very little published research correlating waveform characteristics to internal tree decay. This tool offers researchers that opportunity and arborists and urban foresters using the tool regularly in the field a chance to serve as citizen scientists making observations and seeing relationships between waveform variations and tree wood defects.

Waveform characteristics to observe are as follows:

1. Amplitude, the vertical distance between the crest and the trough of the wave;
2. Wavelength, the horizontal distance between the oscillations of the wave;
3. Frequency, the total number of vibrations or oscillations made within a certain amount of time;
4. Attenuation, the gradual loss of wavelength intensity due to absorption within the wood medium; exhibited as the waveform flattening.

Researchers may want to transfer field data from the tool into a computer program for further analysis. They can do so by selecting the SAVE option on the touch screen rather than the DISCARD option. This records the last measurement taken to the memory card inserted into the top panel of the main circuit board box. The text file can be downloaded into an analytical program or spreadsheet on the researcher's computer for analysis.



TESTING PROCEDURE

1. Determine an elevation on the trunk to conduct the first test, typically, within the first 4 feet of the base
 2. Use the hammer to place the first nail, screw or awl through the bark into the wood to a shallow but wobble-free secure depth. Attach the second nail, screw or awl at the same elevation on the opposite side
 3. Connect the sensors on the opposite nail, screw or awl tightening the set-screws to be sure the sensors' metal base is snug against metal shaft. **The white arrow marked on each sensor must point toward the trunk.** Make sure the telephone cables are properly snapped into the sensors and into the top of the main box.
 4. Turn on the device using the switch on the top of the main box. The screen will light up and indicate which sensor connection leads to the START sensor. When ready to begin the test use a finger to press the touch screen where it says "ARM."
 5. Use the provided hammer to lightly strike the end of the START awl. Do not hit the sensor directly as that will cause damage to the mini-circuit board.
 6. The screen will display the transit time in microseconds on the upper right corner and also display the waveform as a graph moving across the screen.
 7. The screen will display an option to DISCARD or SAVE the reading. Discard the first two or three readings to repeat the tapping procedure until a consistent average transit time is determined. It is rare to have the exact number on each tap but with a few taps of fairly equal force numbers clustered around an average can be obtained.
 8. When satisfied that a good average number has been obtained on the last tap use that number as your transit time for that location. If further analysis of the waveform on your computer is desired, touch the SAVE option placing that test result on the inserted memory card. In most cases it is unnecessary to save the results. Make note of the average transit time and characteristics of the waveform then touch the DISCARD.
 9. Use a tape measure or caliper to measure the diameter distance between the sensors to the nearest centimeter or inch. Calculate the transit time per unit
-



measurement by simply dividing the average total transit time by the number of centimeters or inches in the measured trunk diameter distance. For example, if the average transit time is 600 microseconds and the distance is 20 inches, then $600/20$ is 30 microseconds per inch.

10. To disconnect Tree Check from the trunk, first remove the sensors from the nails, screws or awls by loosening the set screws. Then remove the nails, screws or awls from the trunk.

11. To have the best chance to capture defects in the transverse section of the trunk being tested, reposition the sensors at the same elevation but in a new diameter position at right angles to the first test. Repeat the tapping procedure as above.

12. To preserve battery life, turn off the device after each use. Replace the 4 AA batteries as needed. *It is very important to match the positive and negative ends of the batteries with the corresponding plus and minus markings on the plastic in the battery box.*





TROUBLESHOOTING

Once you have taken your newly acquired Tree Check tool out of the shipping box, give yourself plenty of time to become familiar with its proper use. Have fun tap testing a variety of trees, some you know are defect-free and others with obvious cavities or defects. Note how the transit time and waveforms vary between test areas.

With practice you will develop a steady, regular tap strike with the hammer; not too light, not too hard, one that gives consistent transit times in the diameter tested. The more practice time you have with the tool, the more expert you will become in its use and interpretation and the more useful it will become as a tool to reveal significant concealed and potentially dangerous tree structural defects.

Problem:	Cause and Solution:
Screen does not light up when switch turned on	Batteries need to be replaced or are not positioned properly positive to positive in the box
Transit times too scattered or too low or high	Hammer taps inconsistent, too hard or too soft; or not hitting correct sensor nail, screw or awl. Or sensors' white arrow not pointing in toward the tree.

Tap does not produce transit time or waveform	Not tapping the correct sensor nail, screw or awl – initial screen shows start side; or white arrow on the sensors not pointing in toward the tree; or not deep enough into the wood.
Other problems	Email other questions to: rbruce@allisontree.com

TREE CHECK

SONIC WAVE TREE DECAY DETECTOR

